



### 3. MUSIC CONTROL

- MUS.VOL : Control increase/decrease music volume level.
- TREBLE : Control increase/decrease the amount of treble (hi) frequency response for music.
- BASS : Control increase/decrease the amount of bass (low) frequency response for music.
- SELECT INPUT : Keep the knob pushed out to select MP3 mode (Bluetooth/USB). Push the knob in to select AUX mode (OPTICAL/3.5mm/6.5mm) for instruments or external devices (TV, DVD, etc.).

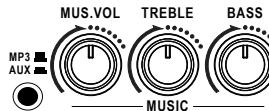

### 4. MIC CONTROL

- DELAY : Control increase/decrease the amount of delay applied to the microphone.
- ECHO : Control increase/decrease the amount of echo applied to the microphone.
- TREBLE : Control increase/decrease the amount of treble (hi) frequency applied to the microphone.
- BASS : Control increase/decrease the amount of bass (low) frequency applied to the microphone.
- MIC.VOL : Control increase/decrease volume level for the 2 wireless microphones include in the machine and external microphone.
- MIC IN : Connector for wire or wireless external microphone.

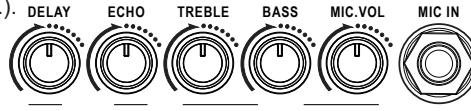

GUITAR IN GUI.VOL OPTICAL IN AUX IN AUX OUT




### 5. INPUT/OUTPUT

- GUITAR IN : Connector for the guitar or other instrument.
- GUI.VOL : Control increase/decrease guitar volume level or other instrument.
- OPTICAL IN : Optical standard signal input.
- AUX IN : Connect 3.5mm cable to outside player such as TV, Bluetooth speaker,...
- AUX OUT : Connect using 3.5mm cable to another Bluetooth speaker, amplifier speaker, amplifier ...

### 6. HOW TO CONNECT MICROPHONE WITH THE SPEAKER

#### POWER SWITCH ON/OFF

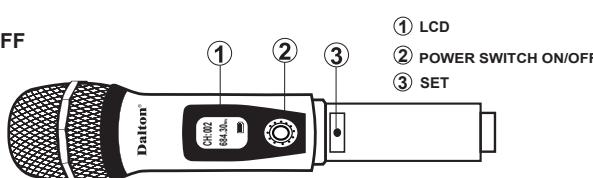

- Step 1: Turn off speaker and microphone power.
- Step 2: Press and hold "SET" button and microphone power switch at the same time, the LCD screen displays "Ld---" start flashing.
- Step 3: Turn on speaker power.
- Step 4: After 5 seconds, press the microphone power switch to connect the frequency with the speaker.

## I. IMPORTANT SAFETY INSTRUCTIONS

**Warning:** To reduce the risk of electric shock, do not expose this appliance to rain or moisture.

**Warning:** The mains plug or AC inlet is used as disconnect device the disconnect device shall remain readily operable.

**Warning:** Connect only to mains socket with protective earthing connection.


**Warning:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-servicable parts inside. Refer servicing to qualified personnel.

1. Read these instructions carefully before use.
2. Keep these instructions for future reference.
3. Heed all warnings and safety notices.
4. Follow all instructions provided by the manufacturer.
5. Do not use this apparatus near water or in damp conditions.
6. Clean only with a dry, soft cloth.
7. Do not install near any heat sources such as radiators, heat register, stoves, or other apparatus that produce heat.
8. Only use attachments/ accessories specified by the manufacturer.
9. Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on this apparatus.
10. Do not block any ventilation openings. Install in accordance with the manufacturers instructions.
11. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
12. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. To completely disconnect AC power from this apparatus, the power supply cord must be unplugged.
16. Unplug the power cord when fully charged.


## II. SPECIFICATIONS

- Power output: 750W.
- Frequency response: 20Hz-20Khz.
- Includes 2 UHF wireless microphones.
- Microphone: Echo/Delay/Bass/Treble controls.
- USB flash drive.
- Bluetooth function.
- Built-in high capacity rechargeable lithium battery (12Vdc).
- Power voltage: AC 120V/60Hz.

## FRONTSIDE MACHINE

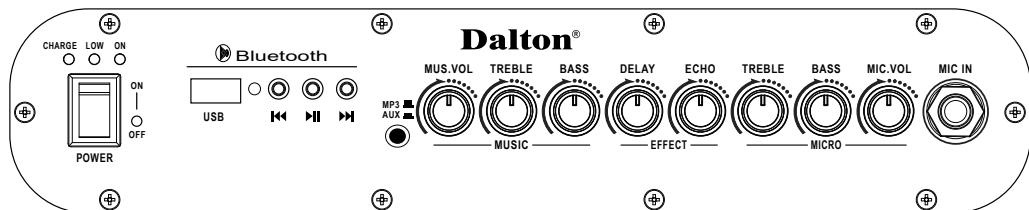

## REARSIDE MACHINE

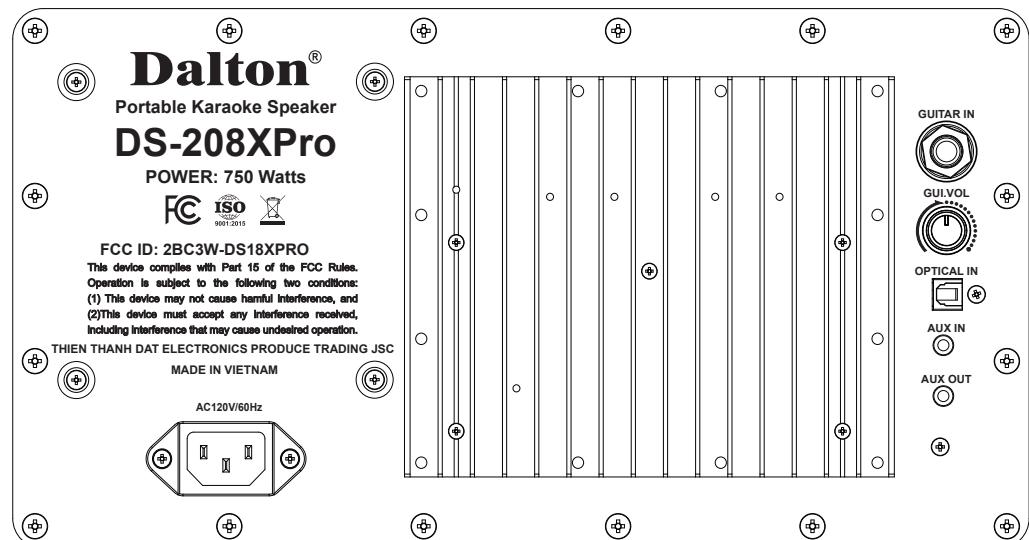


## III. DESCRIPTION OF FUNCTIONS

### 1. POWER

- **POWER: On/Off**

○ **ON** : Machine working mode.

○ **OFF**: Machine off mode.

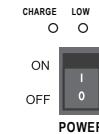

- **LED LIGHTS:**

- **ON** : Light meaning machine is on the working status.

- **LOW** : Light meaning rechargeable battery built-in needs to be charged.

- **CHARGE** : Light meaning rechargeable battery built-in is on the charging status.

- **AC-120V/60Hz:** Connect power plug to recharge the battery or use the machine.




- **How to keep the battery last longer:**

- Charge the battery machine every time the LED light show "LOW".

- LED light "CHARGE" changing from red to blue once the battery is full stop charging.

- Turn off the power switch to charge the battery.

### 2. MUSIC PLAYER FUNCTIONS: Bluetooth/USB

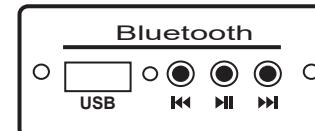

#### How to connect Bluetooth from speaker DS-208XPro to other devices:

- Step 1: Turn on speaker power.
- Step 2: Turn on Bluetooth from your device (TV, IPHONE, IPAD, Android...).
- Step 3: Select ID "Dalton BT03" on the device, your Bluetooth speaker should be paired (connect) to your player device.

To disconnect the Bluetooth of the speaker just hold Pause/Play key about 3 seconds.

#### Functions key on the screen:

- : **Pause/Play**.
  - + Pause/Play song.
  - + Hold about 3 seconds to disconnect/ reconnect the speaker's Bluetooth with your device.
- : **Prev**
  - + PREV go back to the previous song.
- : **Next**
  - + NEXT go the next song.

#### IV. FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

#### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

#### CUSTOMER SUPPORT CENTER



Tel: +1 (346)-534-5539



Dalton Audio Inc



[www.dalton-audio.com/warranty-policy](http://www.dalton-audio.com/warranty-policy)



[www.facebook.com/DaltonAudio](http://www.facebook.com/DaltonAudio)

# Dalton®

## INSTRUCTION MANUAL DS-208XPro

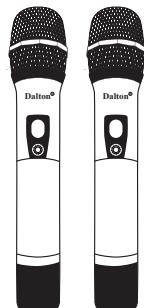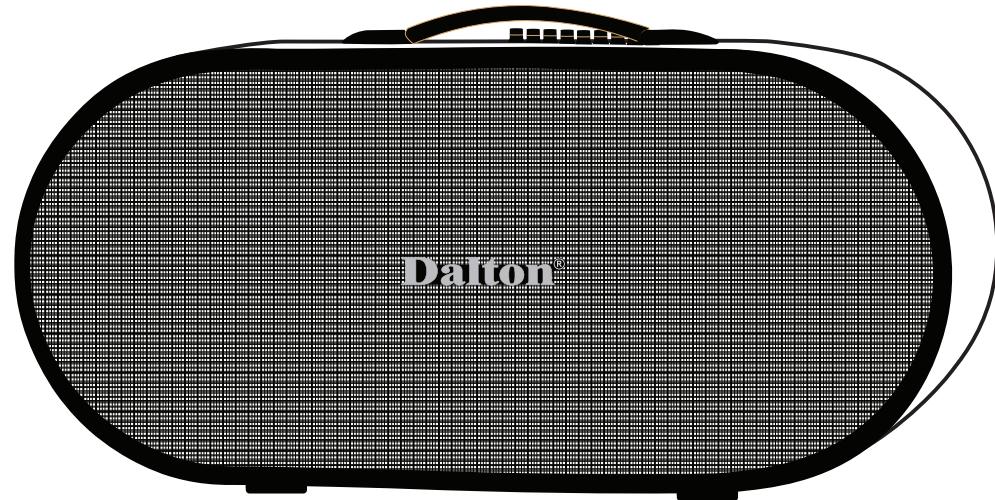

UHF Microphone

## TABLE OF CONTENTS

<b>I. IMPORTANT SAFETY INSTRUCTIONS</b>	1
<b>II. SPECIFICATIONS</b>	2
<b>III. DESCRIPTION OF FUNCTIONS</b>	3
1. POWER	3
2. MUSIC PLAYER FUNCTIONS: Bluetooth/USB	3
3. MUSIC CONTROL	4
4. MIC CONTROL	4
5. INPUT/OUTPUT	4
6. HOW TO CONNECT MICROPHONE WITH THE SPEAKER	4
7. HOW TO SET WIRELESS MICROPHONE FREQUENCY	5
8. HOW TO CHANGE MICROPHONE FREQUENCY CHANNEL	5
9. STANDARD CALIBRATION LEVEL FOR DALTON SPEAKER	5
<b>IV. FCC STATEMENT</b>	6

### 7. HOW TO SET WIRELESS MICROPHONE FREQUENCY

- Step 1: Turn on Microphone.
- Step 2: Press "SET" button continuously on the microphone to select the frequency desired. Turn off microphone power.
- Step 3: Follow the steps as in section 5 of part III.

### 8. HOW TO CHANGE MICROPHONE FREQUENCY CHANNEL


Microphone has two frequency channels

- Channel 1: 657.00 MHz - 659.85 MHz
- Channel 2: 684.00 MHz - 689.50 MHz

**DS-208XPro speaker receives frequency channel 1. If the microphone displays the wrong frequency channel, please follow these steps:**

- Step 1: Turn on microphone.
- Step 2: Press and hold the power button, then press and hold the "set" button at the same time until the LCD displays "CH-1".
- Step 3: Turn on microphone, check the frequency displayed on the LCD.

### 9. STANDARD CALIBRATION LEVEL FOR DALTON SPEAKER

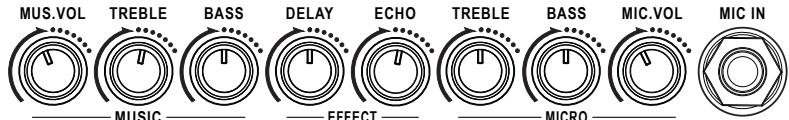

- The picture just for reference.